

# USER MANUAL GARAGE DOOR RF200



## 1. Guarantee conditions

The manual has been prepared to be used by qualified workers and cannot be used by people who are not entitled. Should any questions or doubts occur, you are requested to contact company.

The manual presents correct way of montage of garage door hardware only. In order to assembly a garage door with sandwich panel and other devices, the producer should follow manuals of the sandwich panel and other devices. The sandwich panel and other devices should be produced according to European Union rules.

## 2. Assembly conditions

Unprofessional assembly, any variations of the assembly that are not in accordance with this manual, will be made on the garage door Producer's responsibility.

This also applies to any damages caused by improper use and not following the rules of this manual as well as improper service.

The system presented in this manual should be used in residential buildings only and can be assembled and run by qualified workers only.

1. Make sure that during working with electric devices the power is off.
2. Security devices should never be switched off!
3. Be careful in case of keen edges, use gloves.
4. If visible damages of sectional door occur, stop further using of the door.
5. While assembly/maintenance of the door it is recommended to always use gloves and protection shoes, and during drilling use the protection glasses.
6. Mark out the place of working with a tape so that the children and other people keep a distance.
7. It is recommended that maintenance to be carried out by a professional (company or person).
8. Provide proper lightning.
9. Use the suitable tools, especially for springs torsion.

## 3. Range of use

Garage door hardware has been designed for use in residential buildings only.

- Max. garage door width: 5000 mm
- Max. garage door height: 3000 mm
- Max. garage door weight: 160 kg

## 4. Material used to assembly garage door in the building

Fastening materials for assembly of garage door in the building aren't included in door elements set. Assembling person is obligated to use the suitable connecting materials, that connect the door construction with lintel.

## 5. Assembly set

1. Track set (vertical and horizontal)
2. Spring breakdevice
3. Assembling elements of panel, according to used option (hinges, brackets etc.)
4. Steel cables
5. Tubularshaft
6. Springs with fittings
7. Perforated angle or underslung brackets system
8. Box with screws, bolts and other fastening elements.

## 6. Assembly tools

Tools necessary for proper and quick installation:

1. driller with drill of 8.0mm
2. flatwrench 10 mm,
3. flatwrench 13 mm,
4. pass-key,
5. clamp,
6. suspension line,
7. level,
8. assemblydrawings.

## 7. Control and service just after assembly

When assembly is finished worker should control if all elements are connected in accordance with the manual:

- lubrication of bearing brackets and rollers,
- lubrication of hinges,
- lubrication of steelcable,
- placement of Identification Card and required warning labels.

## 8. Passing the finished product to customer

Producer of door passes it to a user and shows him the way of working of the product, teaches him how to use the door and provide the following documents:

- manual of use and service,
- instructions what to do in case of incorrect working of door.

## 9. Garage door maintenance and overview

Door overview shall be signed in Door Service Book. After 3 months since door assembly, assembling person (service person) makes:

- visual control of all elements,
- control of proper door operating and tighten the fasteners if needed.

After 6 months or after 700 cycles the user shall:

- remove impurities from door that have influence on correct working of door,
- lubricate the bearings and rollers,
- lubricate the hinges.


After 12 months since assembly repairer (assembling person) shall control and maintenance of proper door operating:

- roller (damages, materialconsumption, lubrication),
- control of steel cables consumption, especially connections with cable drums and bottom brackets and working places of cable pulleys if applied,
- control of cable pulleys consumption, if applied,
- spring breakdevicecontrol,
- control of vertical track connection with ceiling,
- control of shaft brackets and spring breaking devices,
- control of seals consumption, and damages
- control of shaft coupler, if applied.

## **10. Garagedoor operator**

All electric devices (including operators) that are a part of garage door shall fulfill requirements of European Union standards. Assembly of operator shall be made in accordance with producer manual. In case of lack of power supply or if there is no separate entrance into the garage, door shall be equipped with drive releaser.

**DOOR VIEW – VERTICAL CROSS-SECTION**

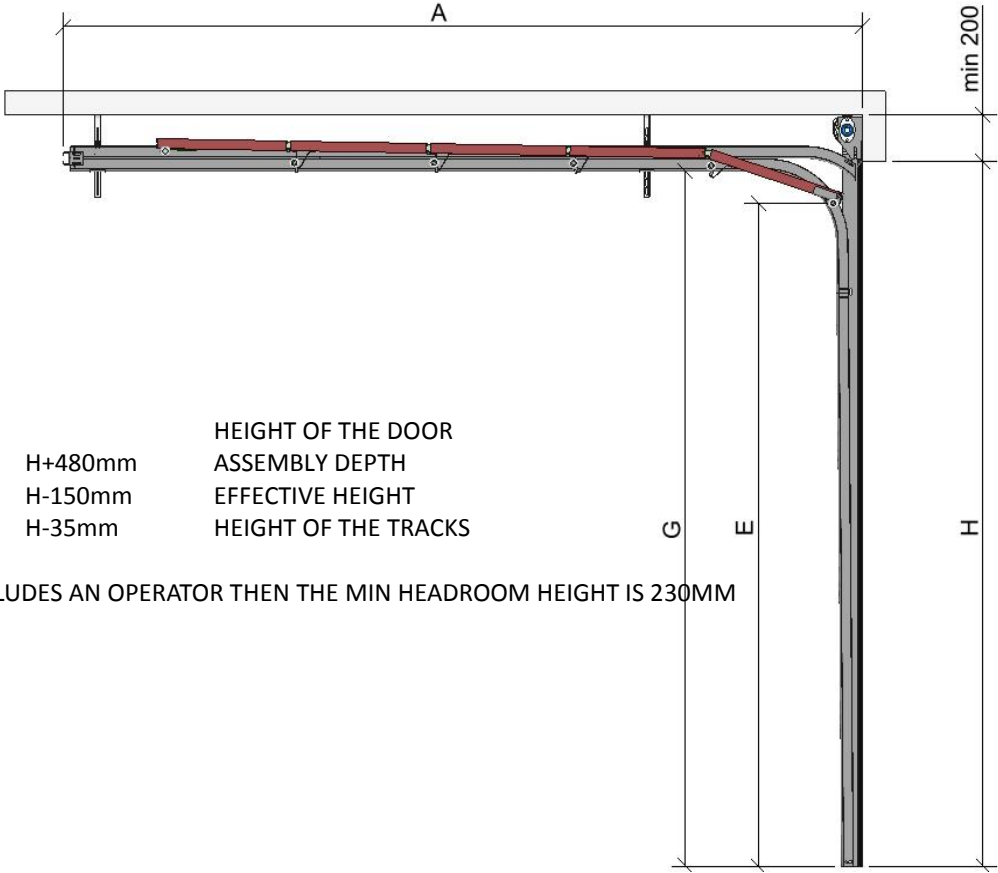


- H HEIGHT OF THE DOOR
- A H+480mm ASSEMBLY DEPTH
- E H-150mm EFFECTIVE HEIGHT
- G H-35mm HEIGHT OF THE TRACKS


IF INCLUDES AN OPERATOR THEN THE MIN HEADROOM HEIGHT IS 230MM

**DOOR VIEW – HORIZONTAL CROSS-SECTION**




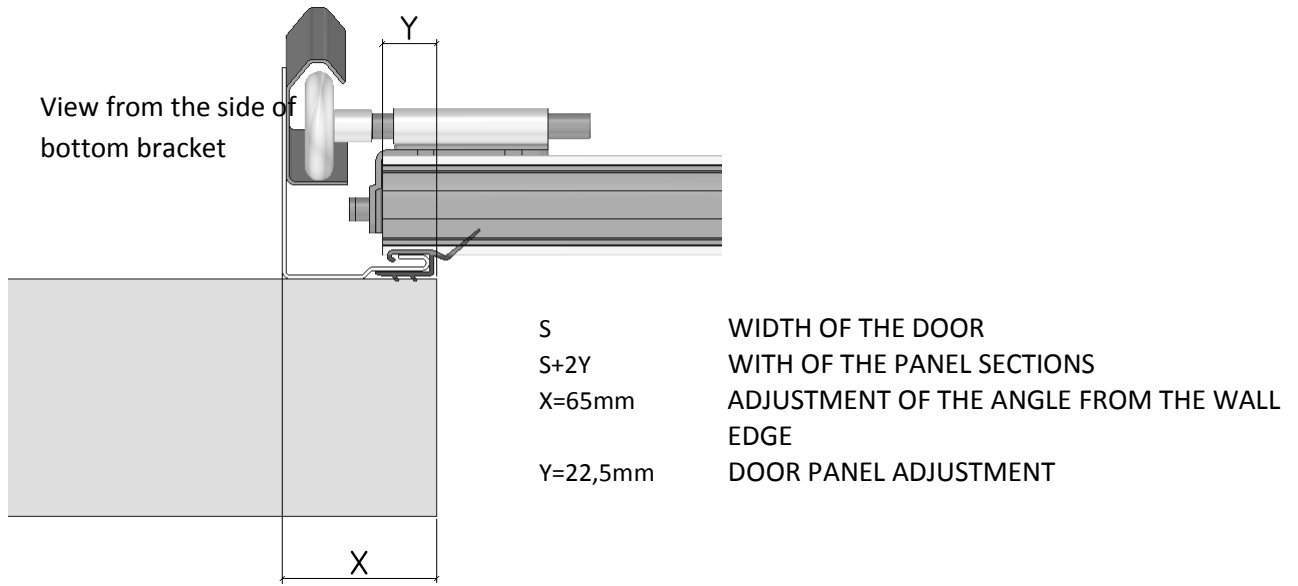

ASSEMBLY OF VERTICAL TRACKS SET

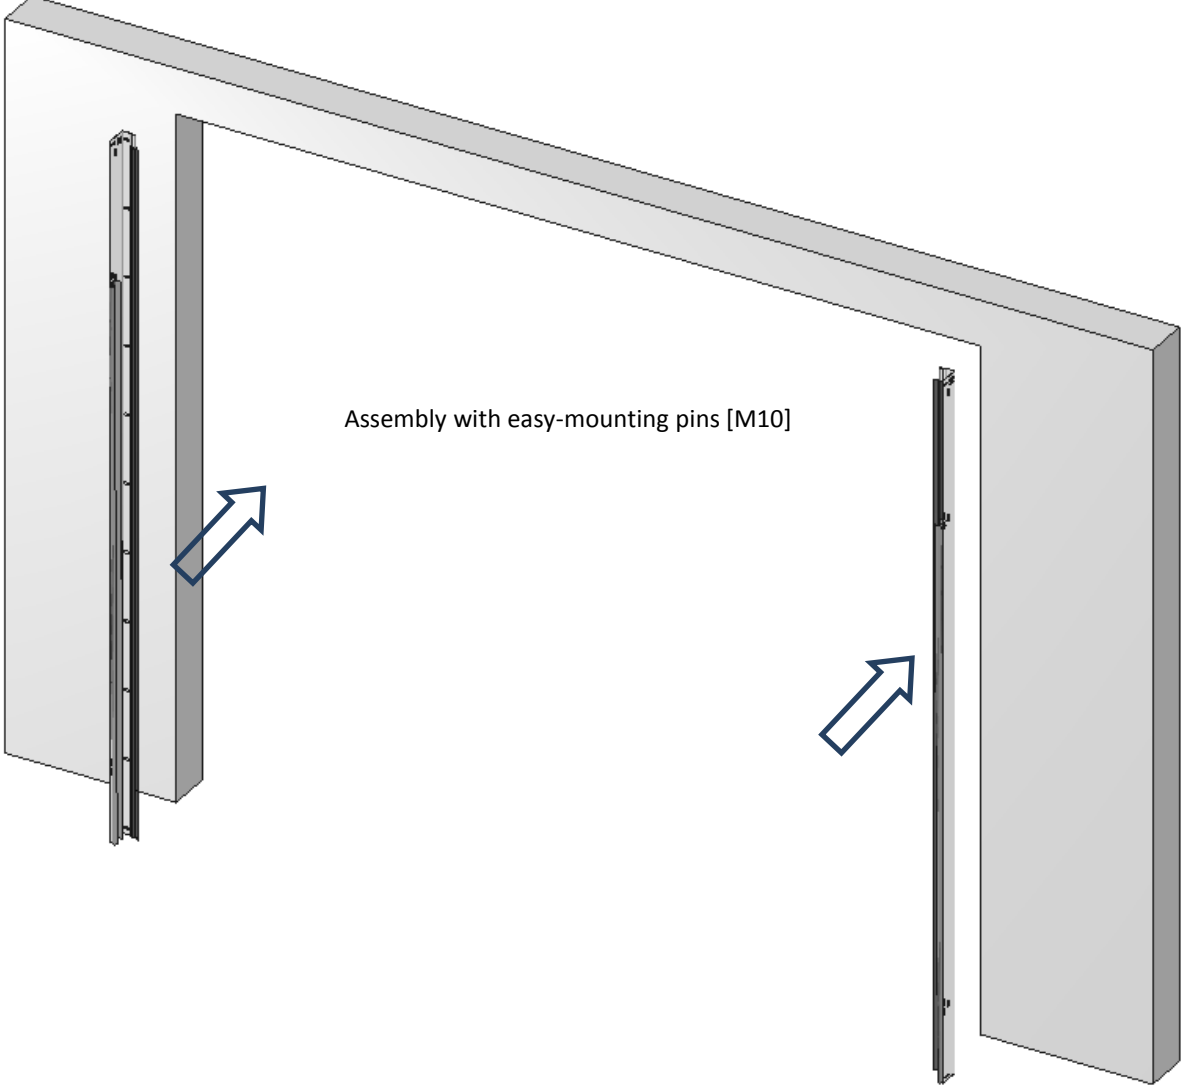


VIEW OF VERTICAL TRACK SET

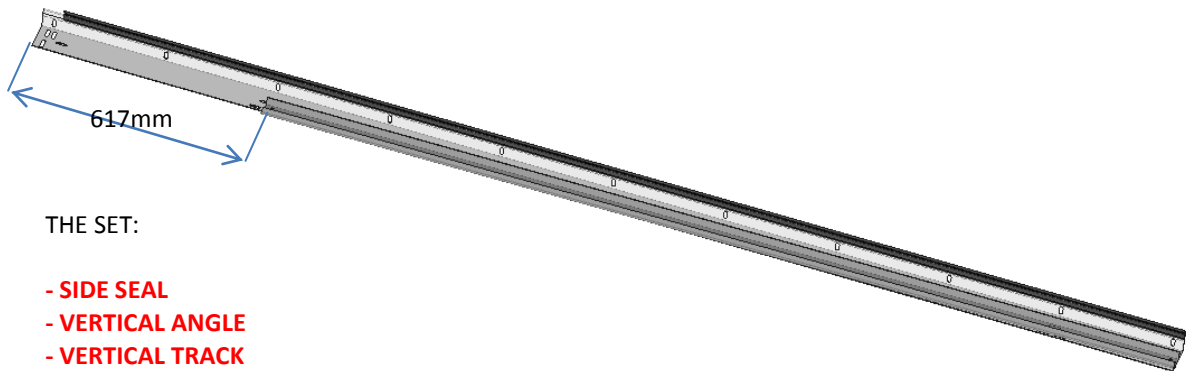


THE SET:

- SIDE SEAL
- VERTICAL ANGLE
- VERTICAL TRACK

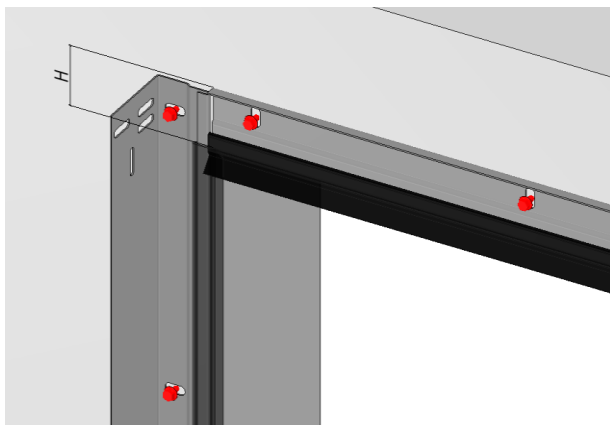


TOP PROFILE TO BE MOUNTED PRECISELY ON THE LEVEL OF THE VERTICAL ANGLE  
CUT THE SEAL ON THE VERTICAL ANGLE FROM THE TOP  
H=65mm


ASSEMBLY THE TOP SEAL ON THE TOP PROFILE  
THE SEAL OF THE SAME LENGTH!

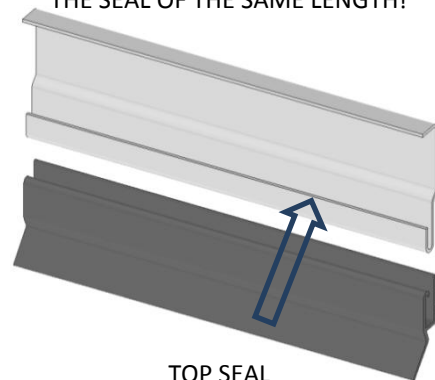


**OPTION:**

**APPLICATION OF THE SEAL TO ALUMINIUM PROFILE ABOVE TOP PANEL**

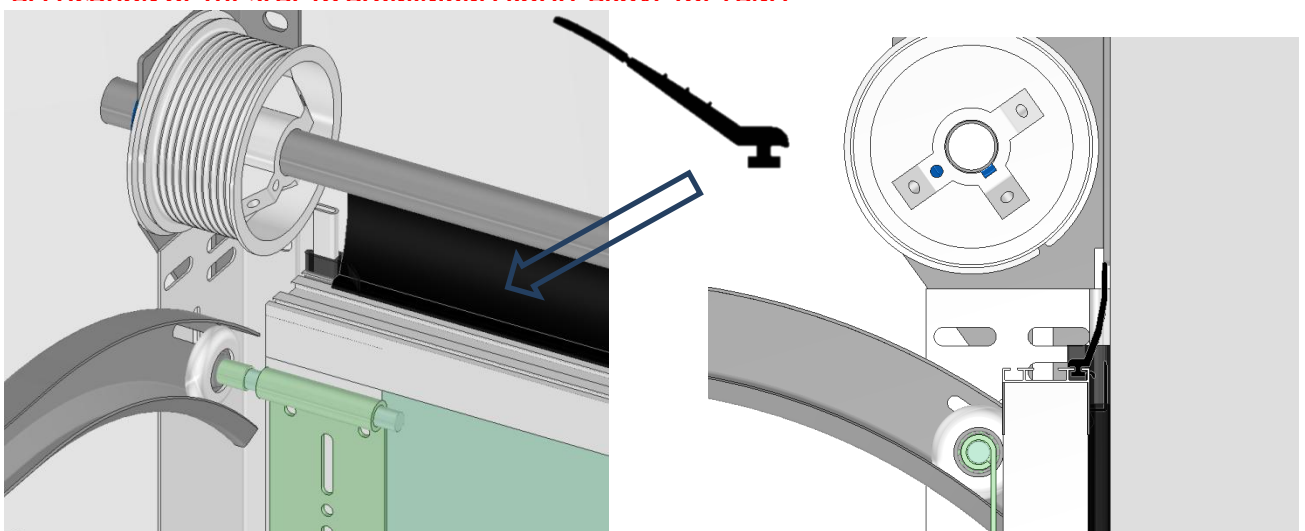

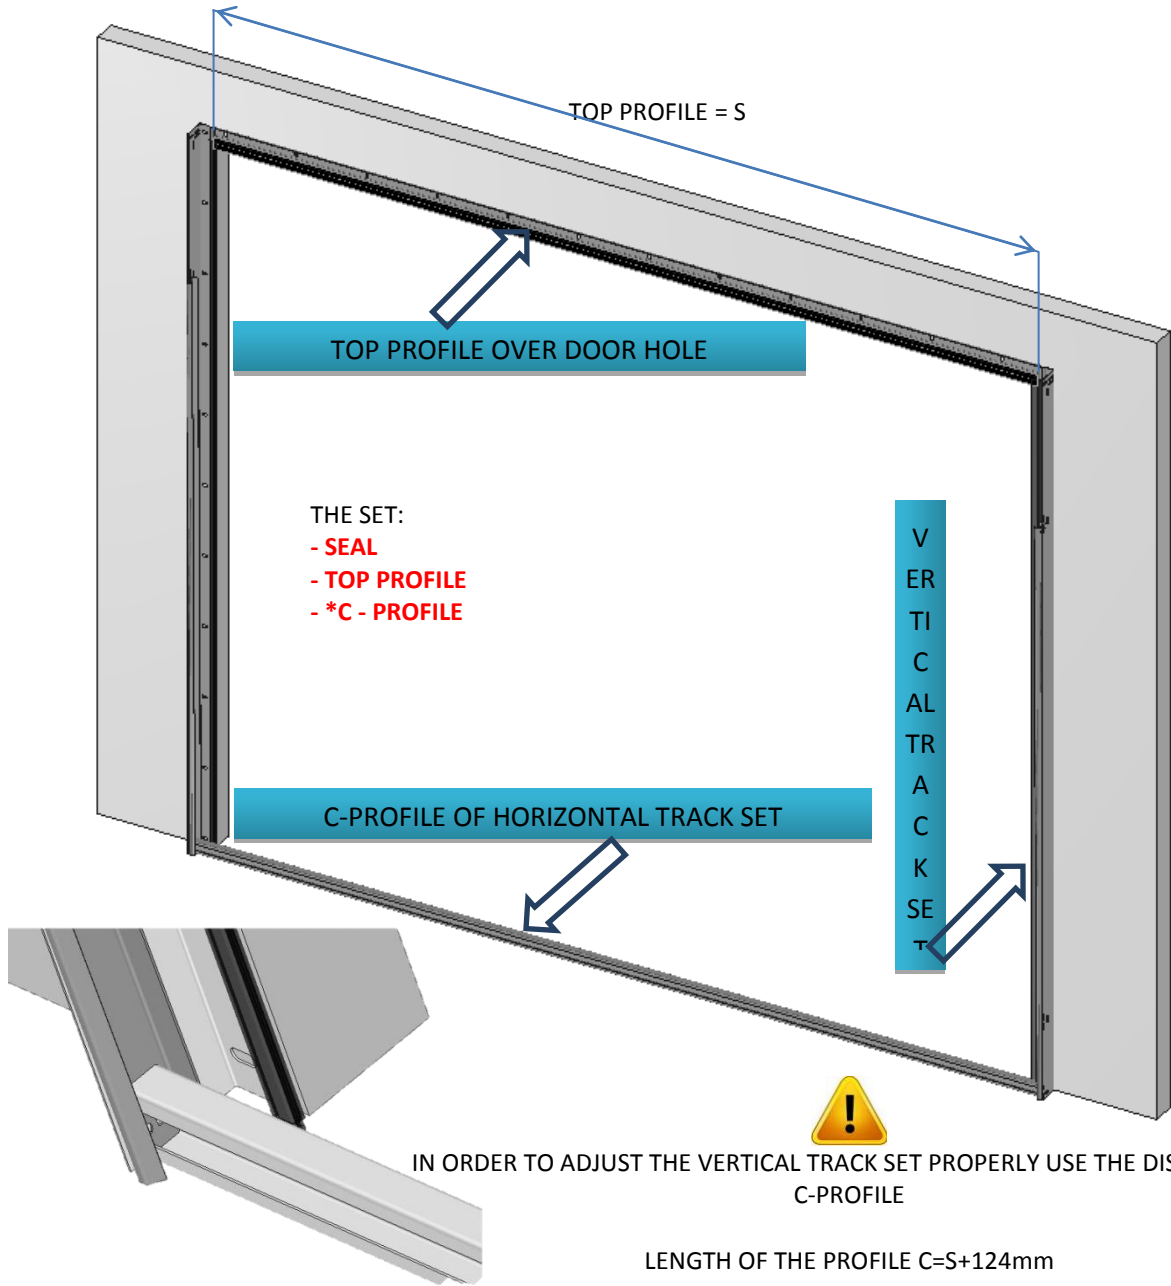




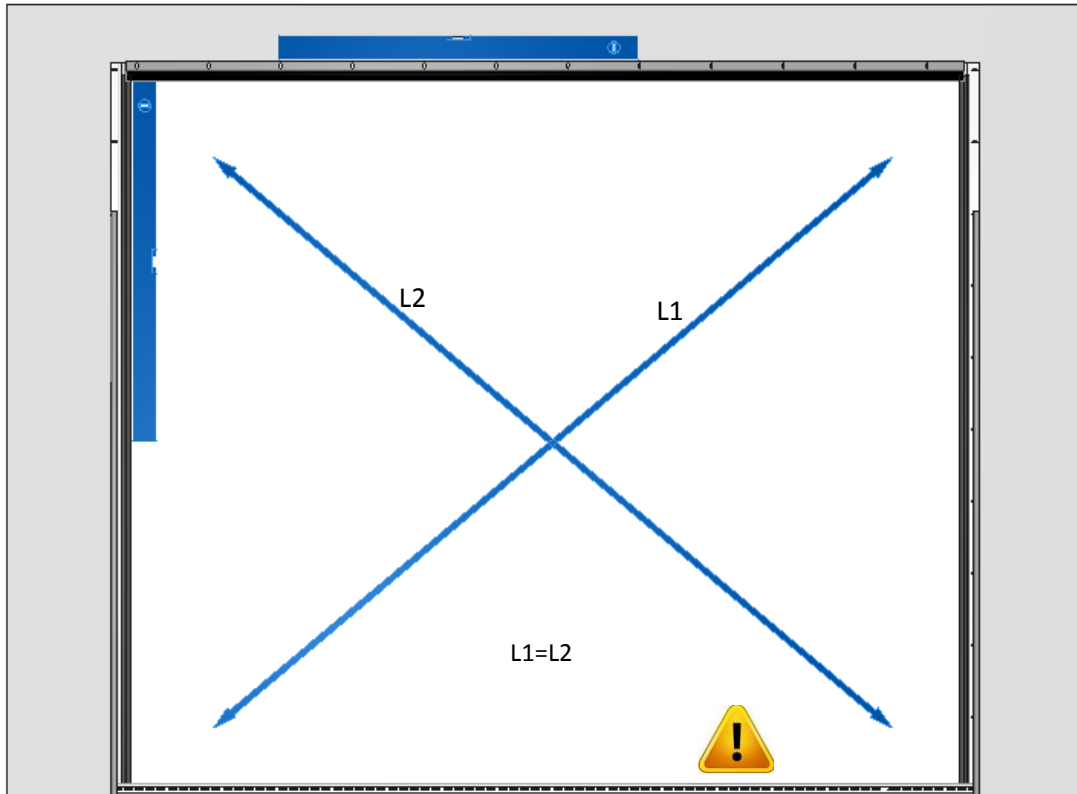

BEFORE TIGHTENING CHECK ALL VERTICAL AND HORIZONTAL ADJUSTMENTS AND LENGTHS OF DIAGONALS  $L1=L2$


ASSEMBLY OF HORIZONTAL TRACKS SET

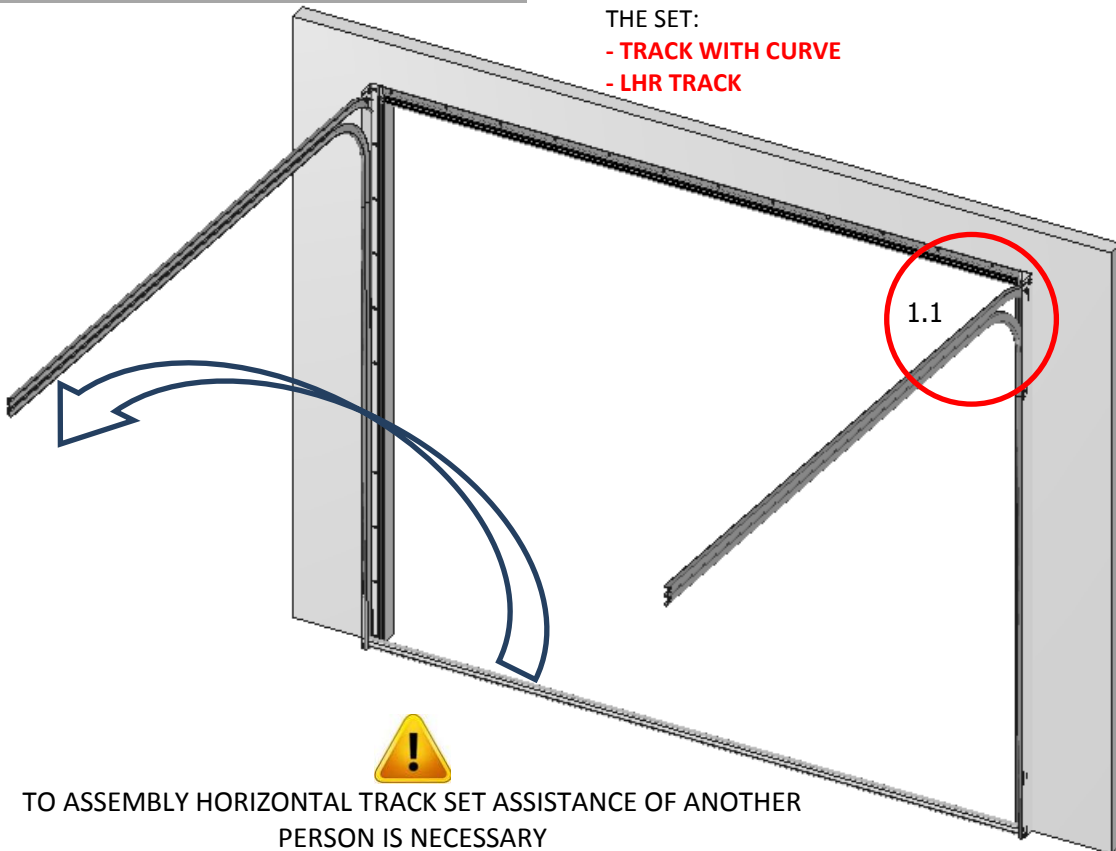


THE SET:  
- TRACK WITH CURVE  
- LHR TRACK

TO ASSEMBLY HORIZONTAL TRACK SET ASSISTANCE OF ANOTHER PERSON IS NECESSARY  
ATTENTION


MOVE THE C-PROFILE TO THE END OF HORIZONTAL TRACK SET

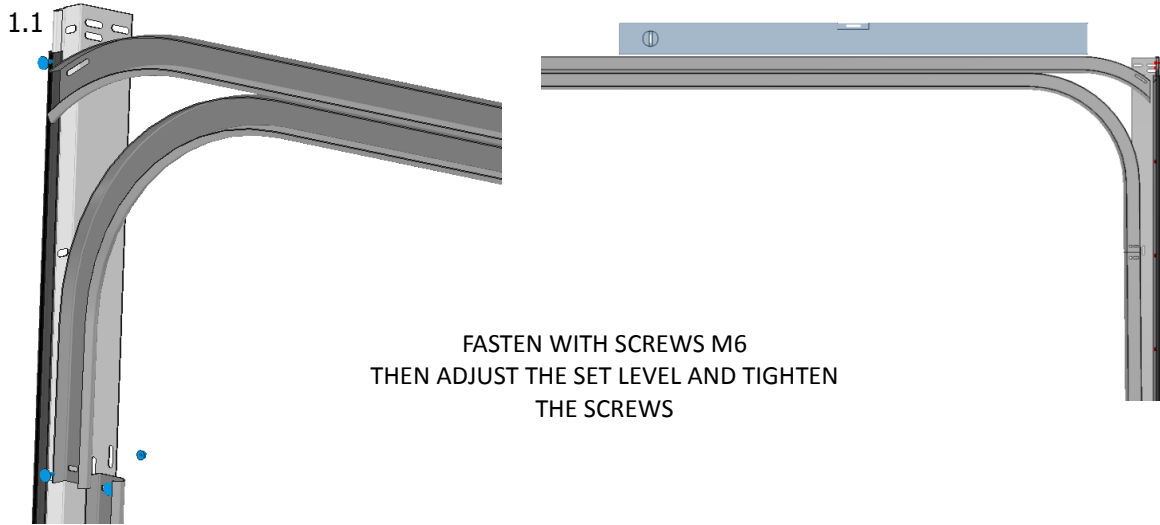

ASSEMBLY OF C-PROFILE AT THE END OF HORIZONTAL TRACKS

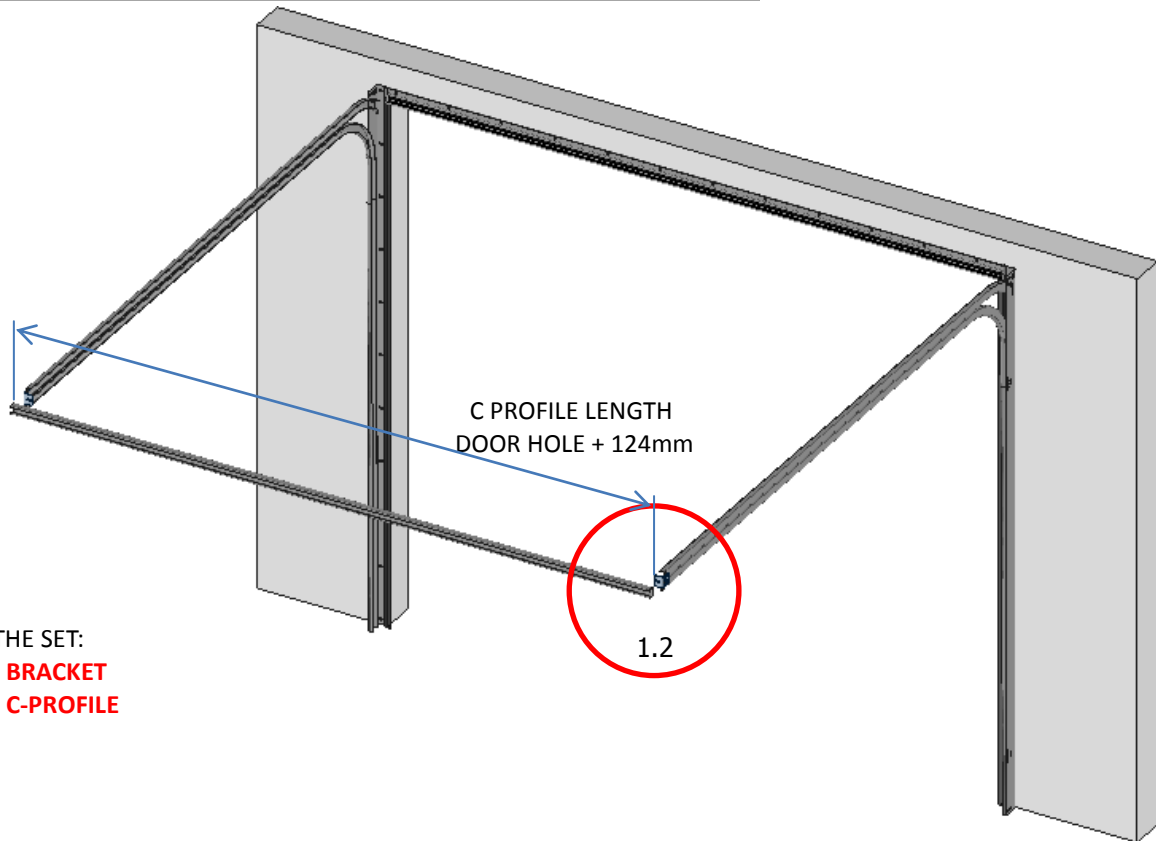


THE SET:  
- BRACKET  
- C-PROFILE

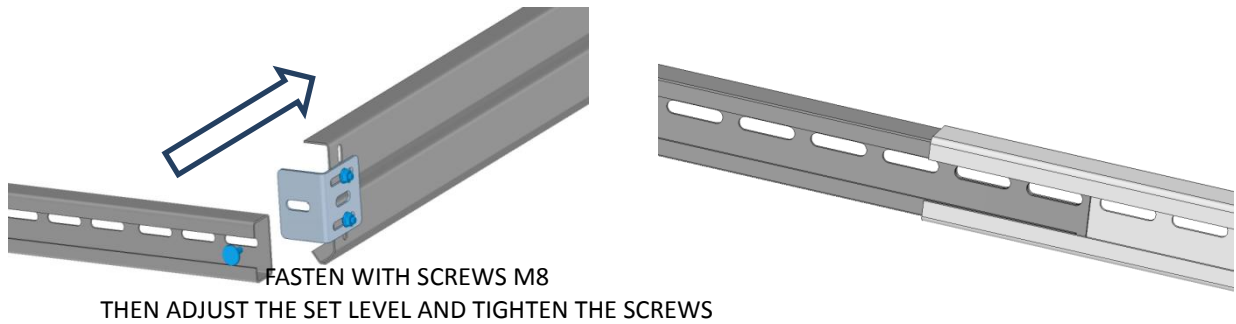


1.2


**C-PROFILE TO BE MOUNTED PRECISELY AT THE LEVEL OF HORIZONTAL TRACKS [DIMENSION TOWARDS INSIDE ]**

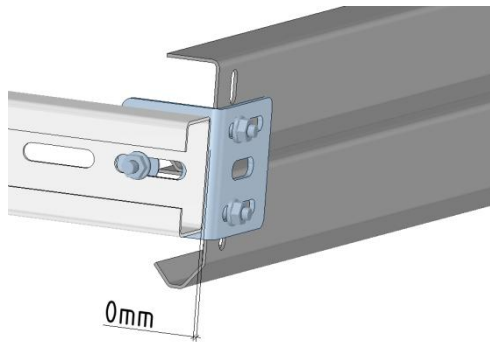

**OPTION:  
APPLICATION OF BOX BEAM, FASTENING WITH USE OF MONTAGE PLATE**

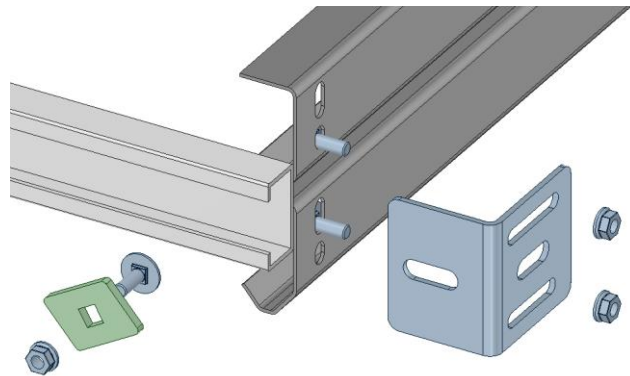


**ASSEMBLY OF MOUNTING PROFILE WITH HORIZONTAL TRACKS**

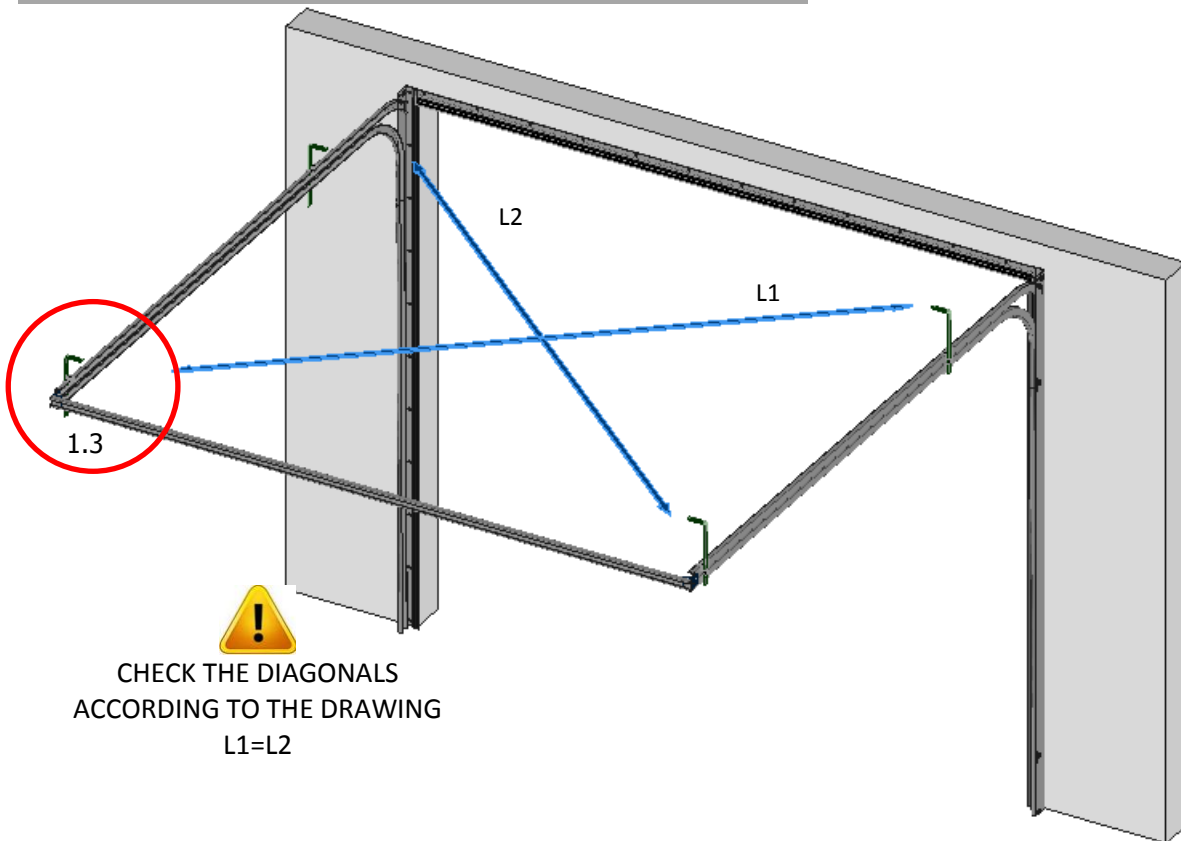

**CHECK THE DIAGONALS  
ACCORDING TO THE DRAWING  
L1=L2**


1.3

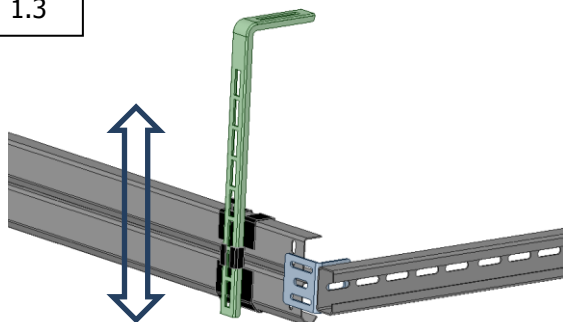

**MAKE THE HOLES  $\phi 10$  IN THE  
CEILING IN ORDER TO FIX THE  
MONTAGE PROFILE TO THE  
TRACKS**



**AFTER LEVEL ADJUSTMENT TIGHTEN WITH SCREWS**

STAGES OF ASSEMBLING OF A MONTAGE BRACKET TO TRACKS

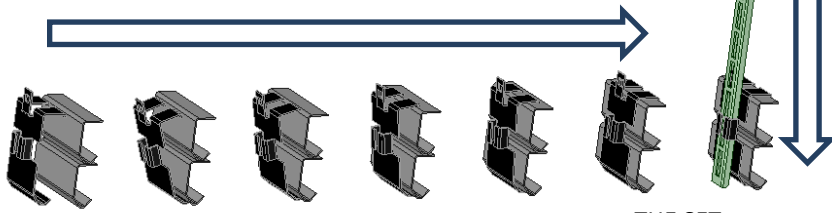

THE SET:  
- ANGULAR MOUNTING PROFILE  
- ANGLE



SHAFT BRACKET ASSEMBLY

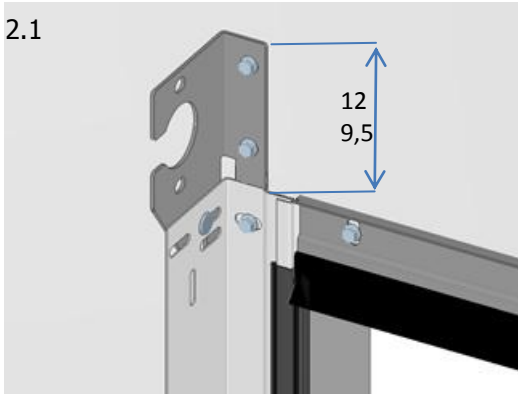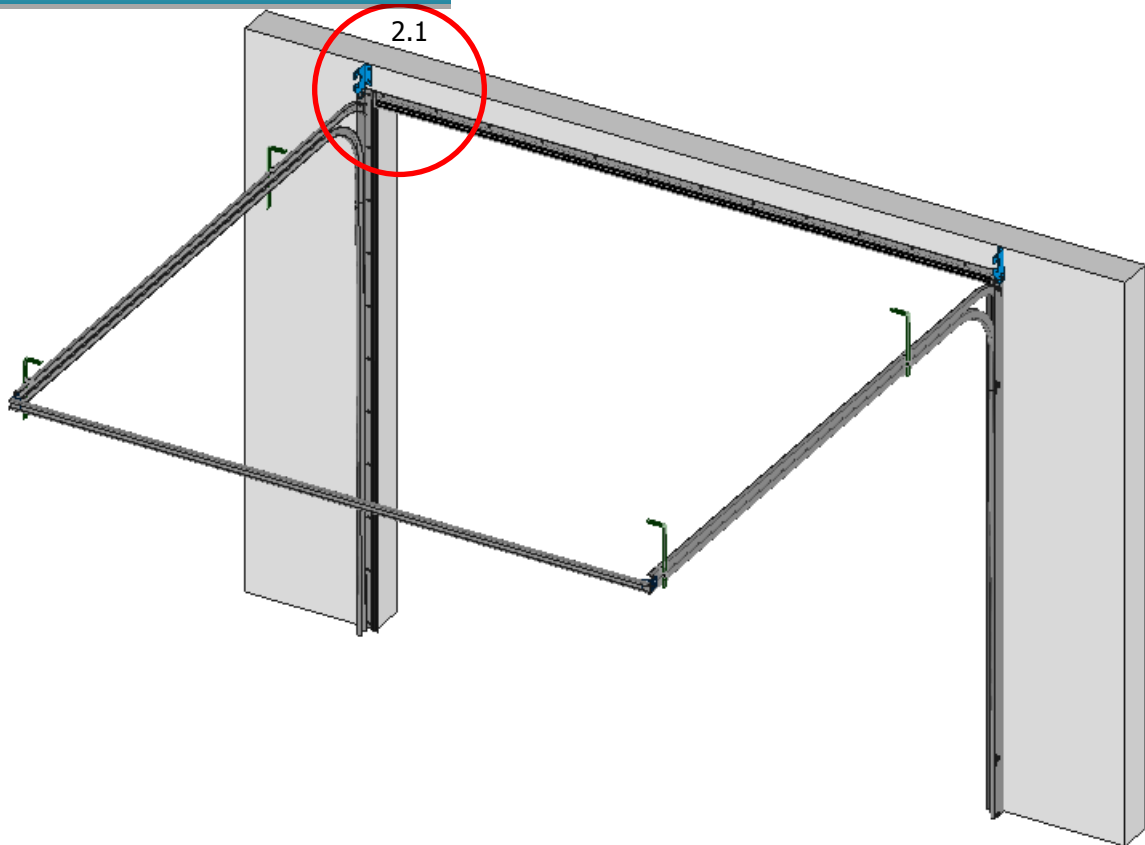


THE SET:  
- SIDE SHAFT BRACKET

Side shaft bracket to be settled directly on the vertical angle




ASSEMBLY OF THE SHAFT – INTERIOR SIDE VIEW

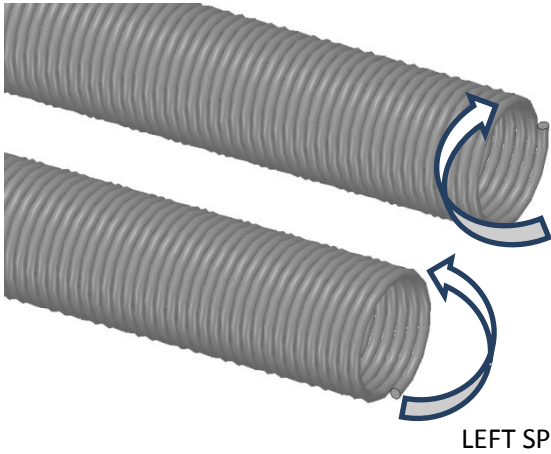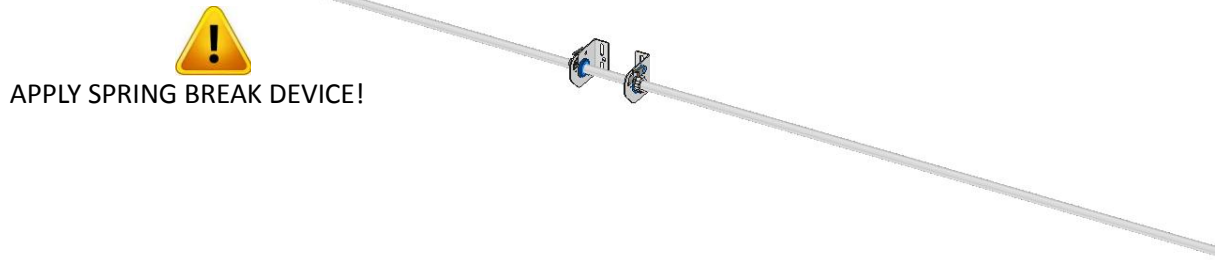

SPRINGS TO BE SELECTED FROM THE APPLICATION

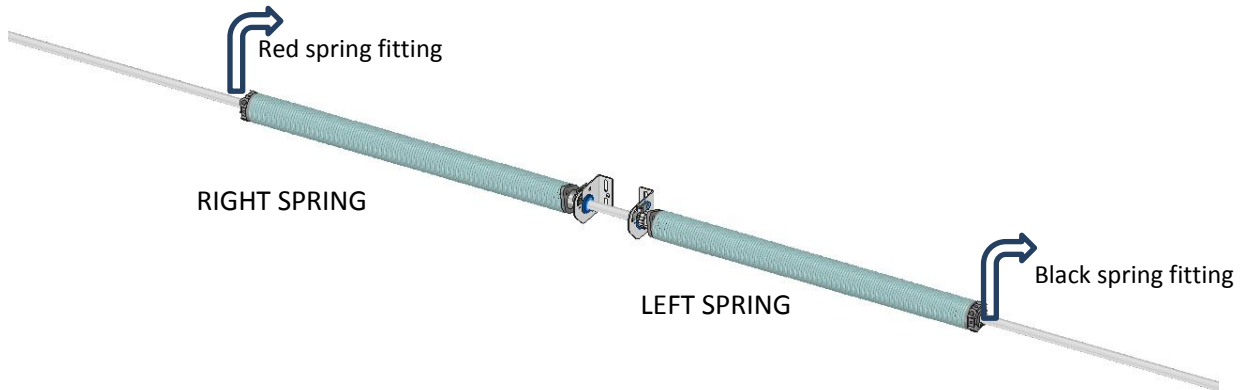

SHAFT ASSEMBLY

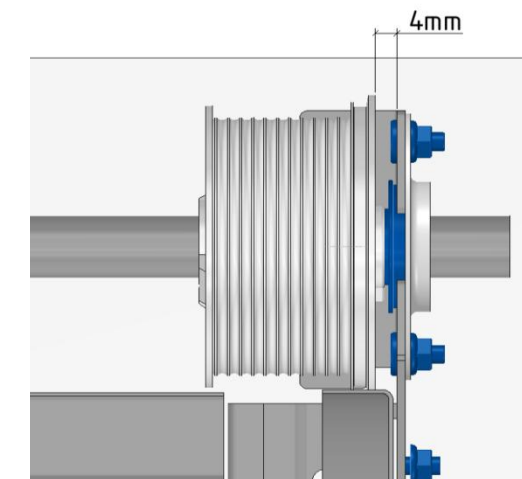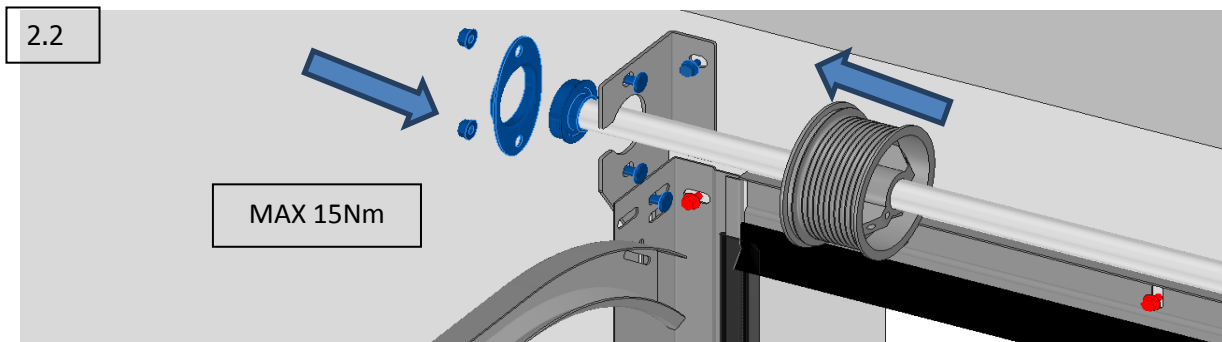
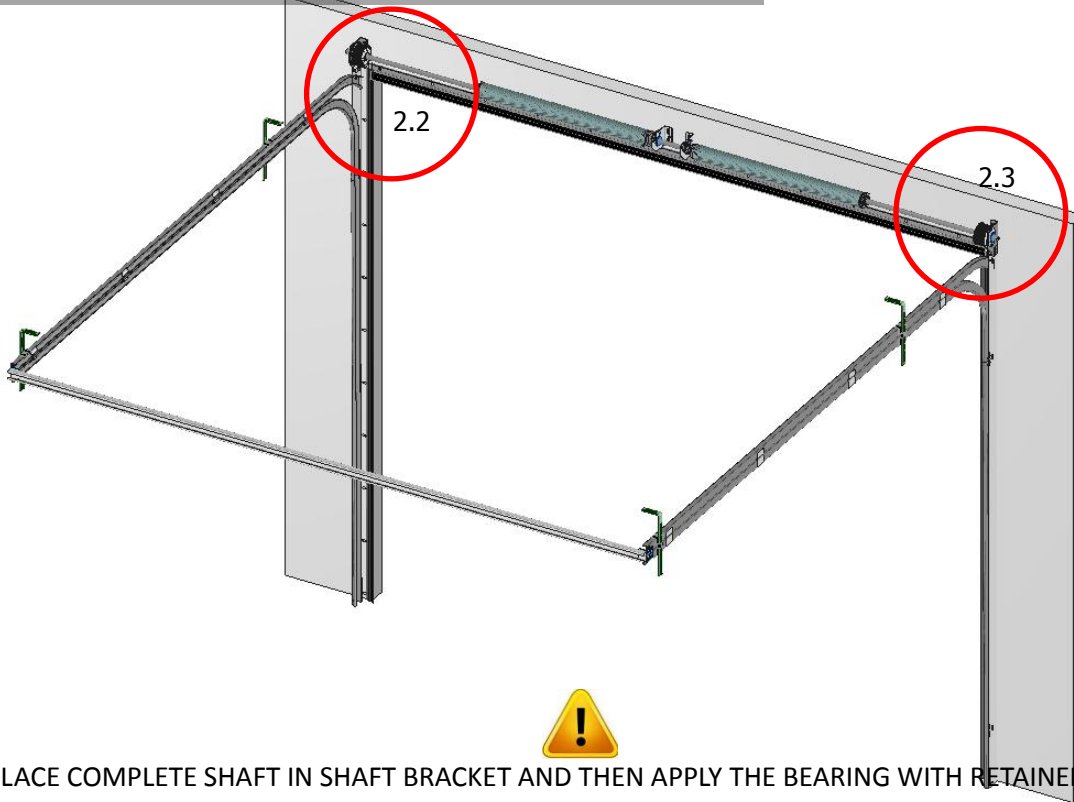


!

KEEP A DISTANCE

2.3

MONTGE OF FIRST PANEL SECTION

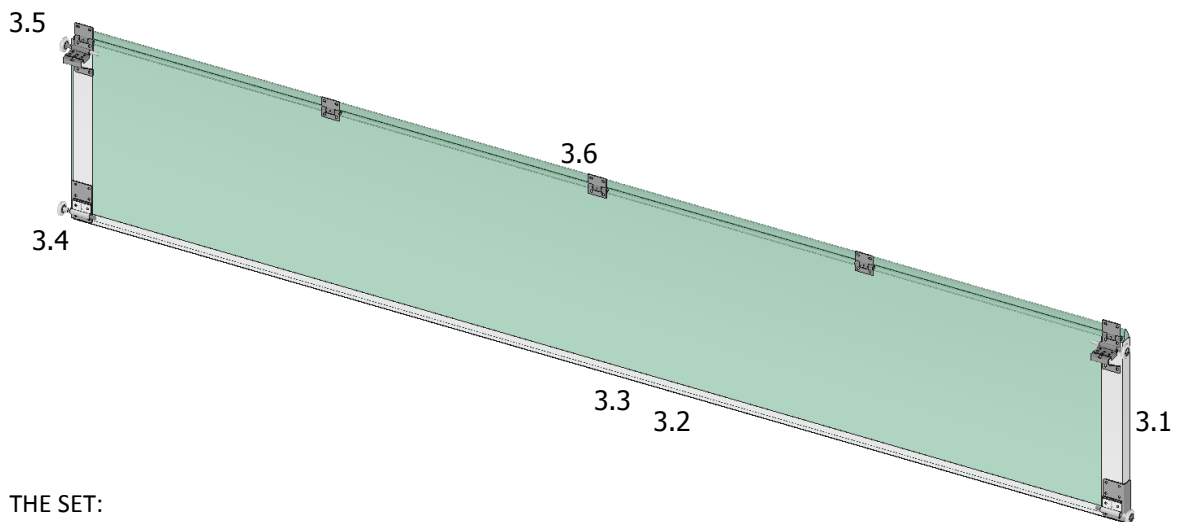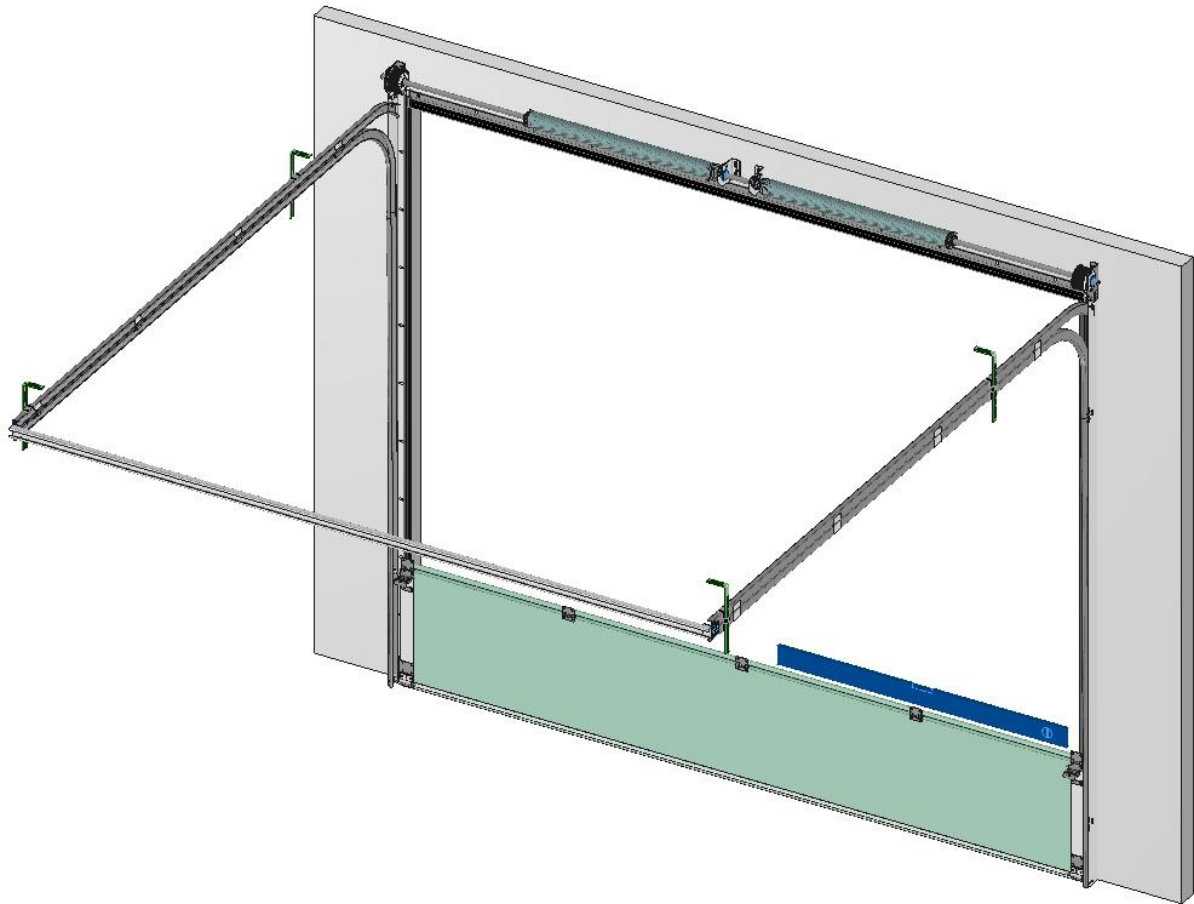


THE SET:


- 3.1 UNIVERSAL ENDCAP
- 3.2 BOTTOM ALUMINIUM PROFILE
- 3.3 BOTTOM SEAL
- 3.4 BOTTOM BTACKET
- 3.5 SIDE HINGE
- 3.6 MIDDLE HINGE

ADJUST TO PANEL TYPE  
ADJUST TO PANEL TYPE


3.1

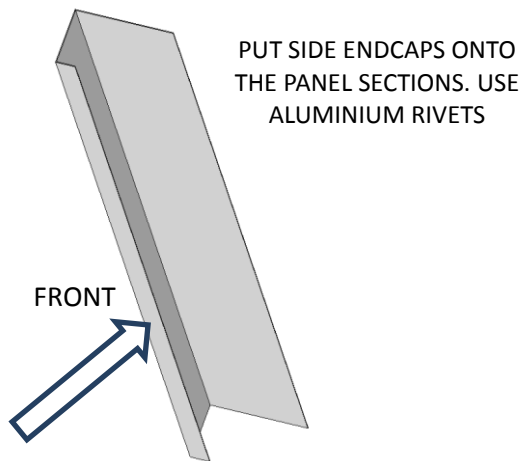


PUT SIDE ENDCAPS ONTO THE PANEL SECTIONS. USE ALUMINIUM RIVETS

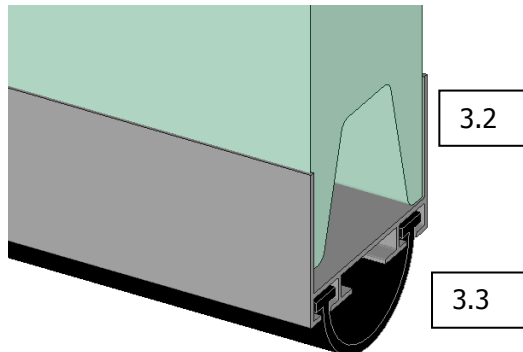

PUT ALUMINIUM PROFILE AND BOTTOM SEAL ONTO THE BOTTOM SECTION

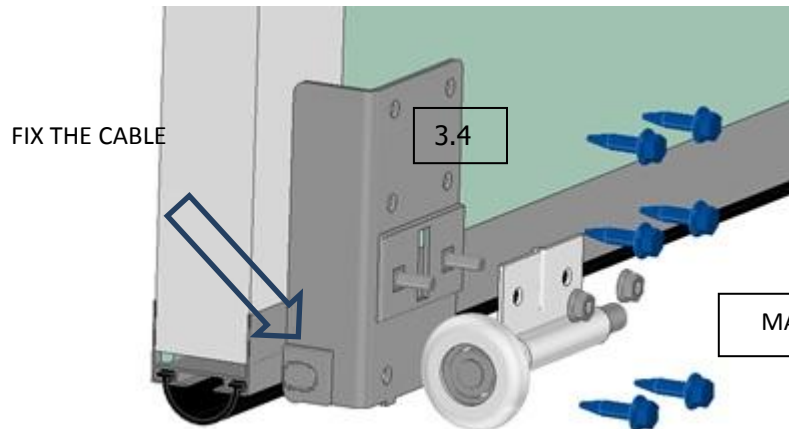


  
MONTAGE OF BOTTOM BRACKET. REGULATE THE ROLLER INSIDE THE TRACK

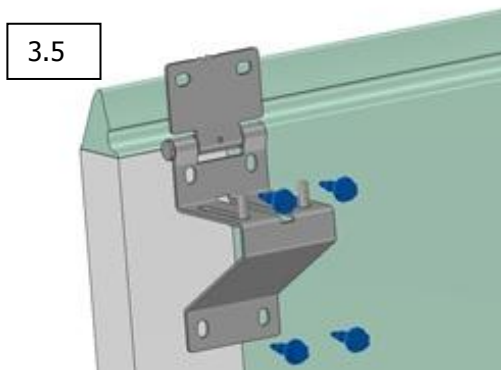

  
APPLY HINGES IN ACCORDANCE WITH PANEL PRODUCER DIRECTIONS

MAX 10Nm

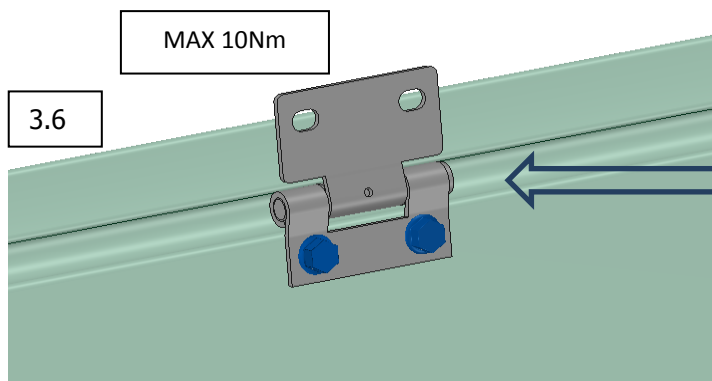


  
APPLY THE HINGE IN ACCORDANCE WITH PANEL PRODUCER DIRECTIONS




For proper selection of number of middle hinges, use the following table:

<b>Door width</b>	<b>Number of middle hinges</b>
0-2749	1
2749-3999	2
3999-5000	3

**MONTAGE OF THE OTHER PANEL SECTIONS**

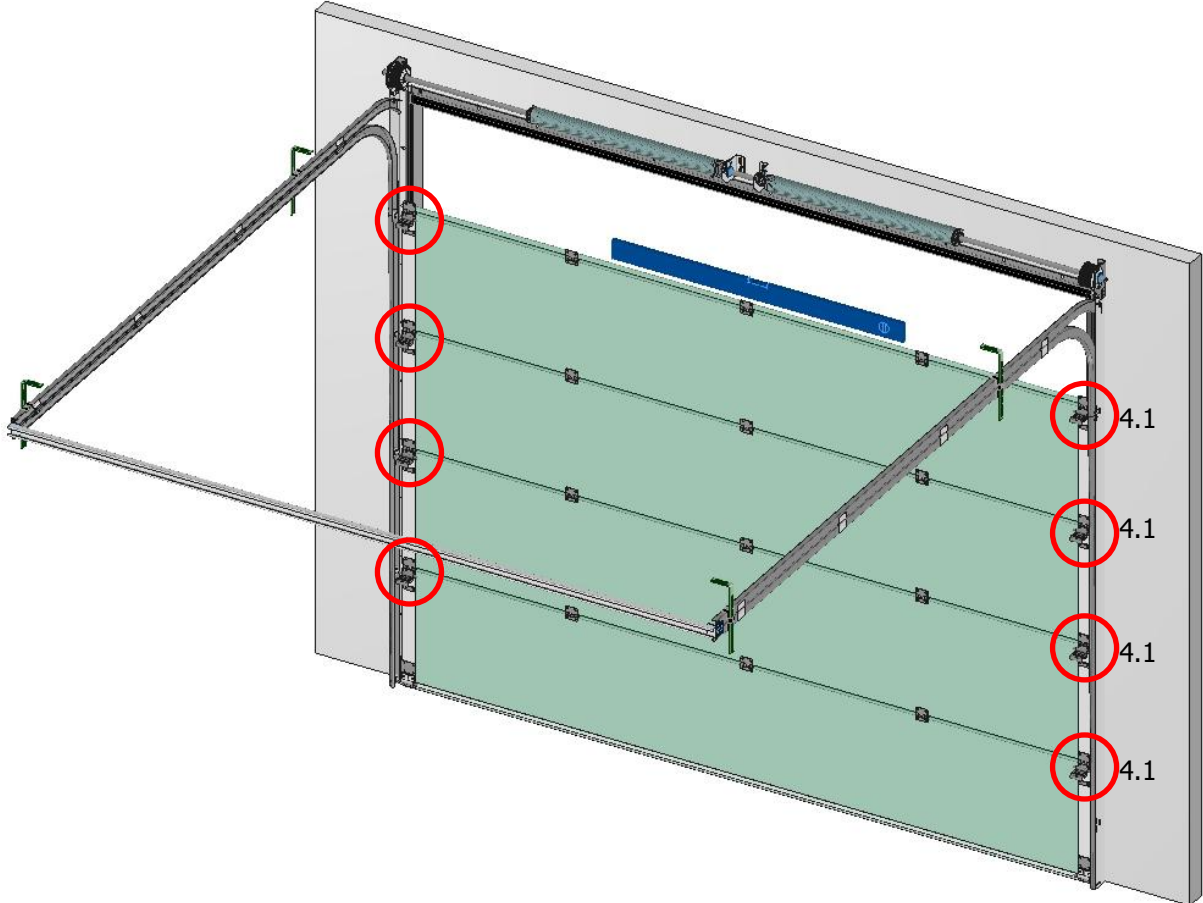


4.1

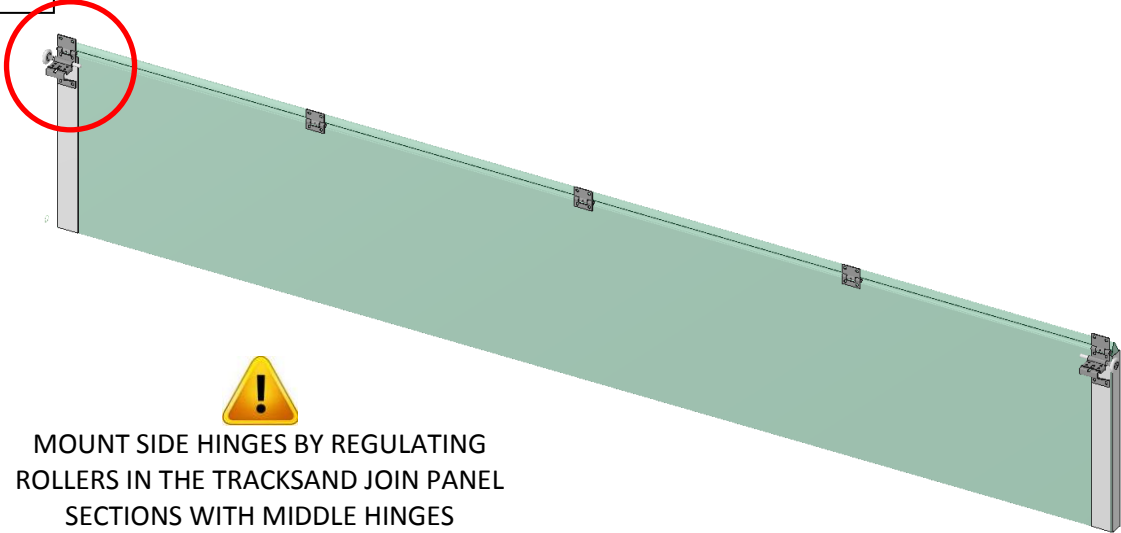


MOUNT SIDE HINGES BY REGULATING  
ROLLERS IN THE TRACKS AND JOIN PANEL  
SECTIONS WITH MIDDLE HINGES


4.1

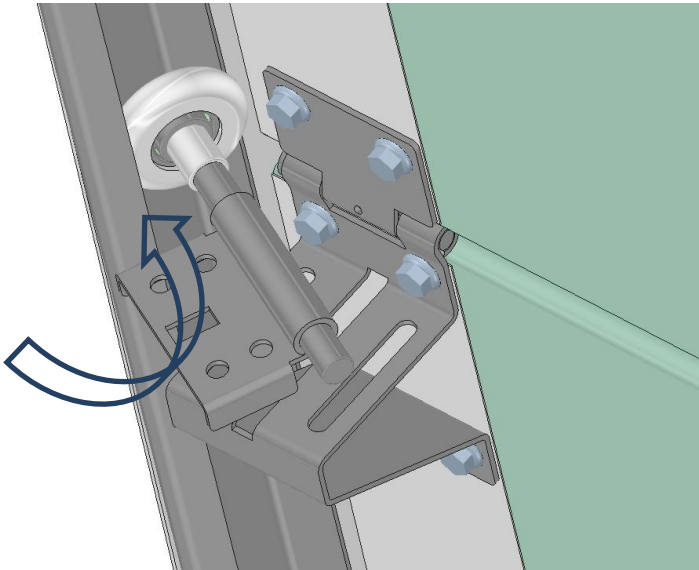

**ATTENTION**  
**PUT A ROLLER INSIDE A TRACK FIRST**  
**AND THEN FIX IT TO THE HINGE**



**MONTAGE OF THE TOP PANEL SECTION**

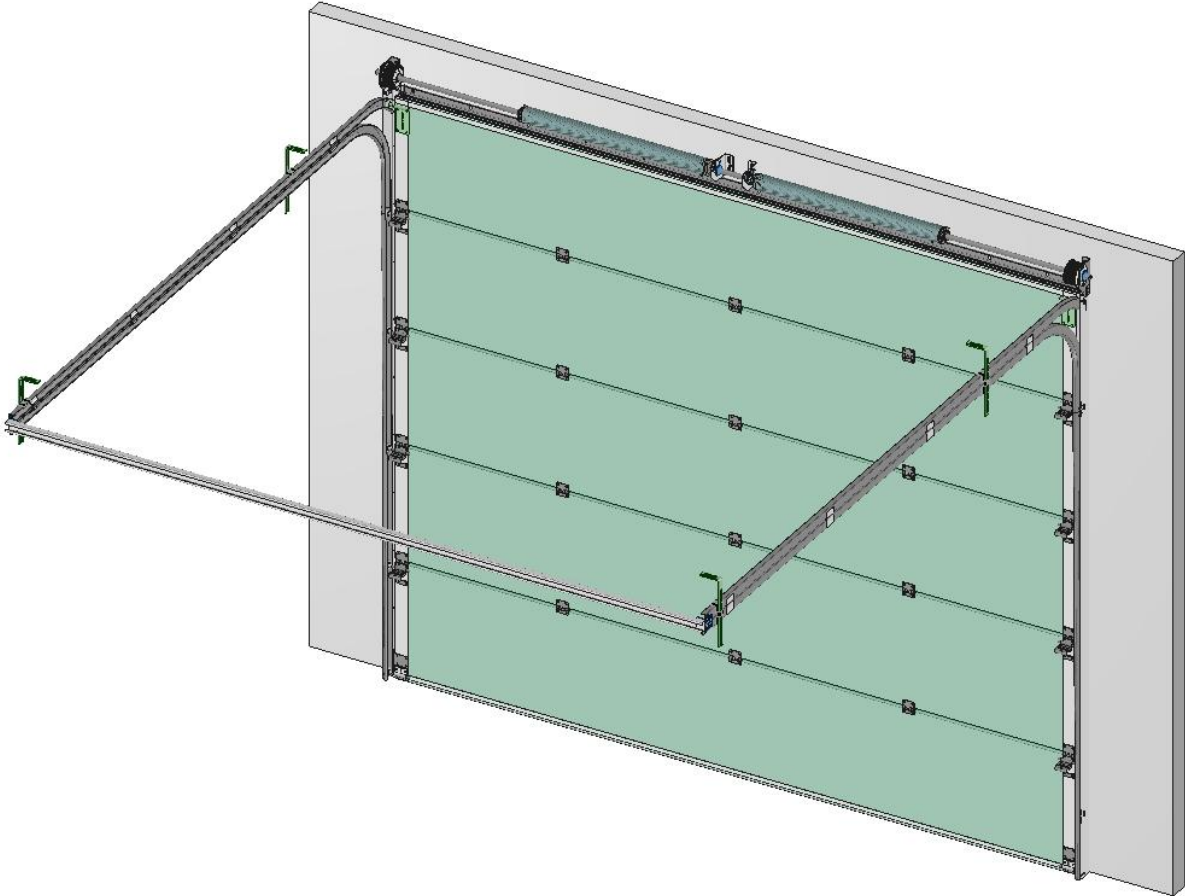

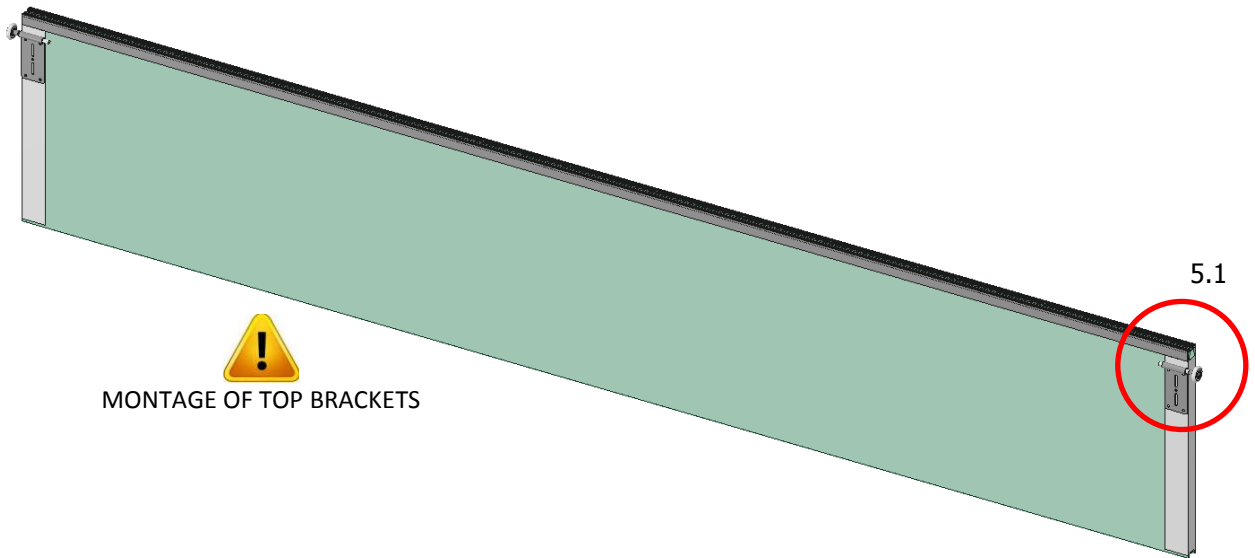


MONTAGE OF TOP BRACKETS

5.1

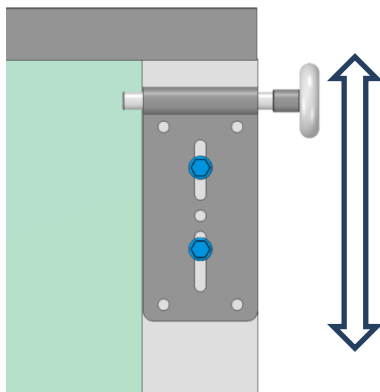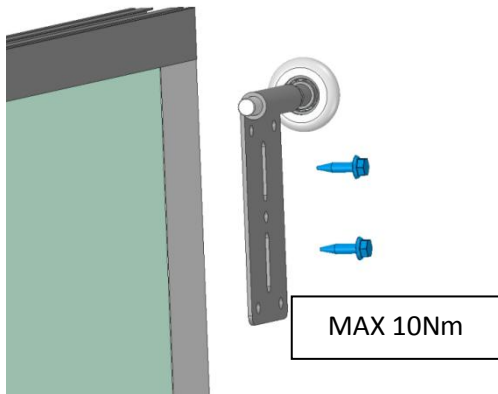


ADJUST THE TOP BRACKET WITH INSIDE SCREWS

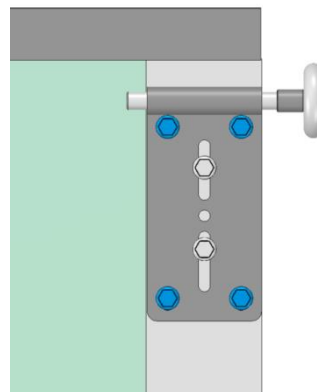



AFTER ADJUSTMENT TIGHTEN THE BRACKET WITH THE BOLTS

**OPTION:  
APPLICATION OF THE SEAL TO ALUMINIUM PROFILE ABOVE TOP PANEL**

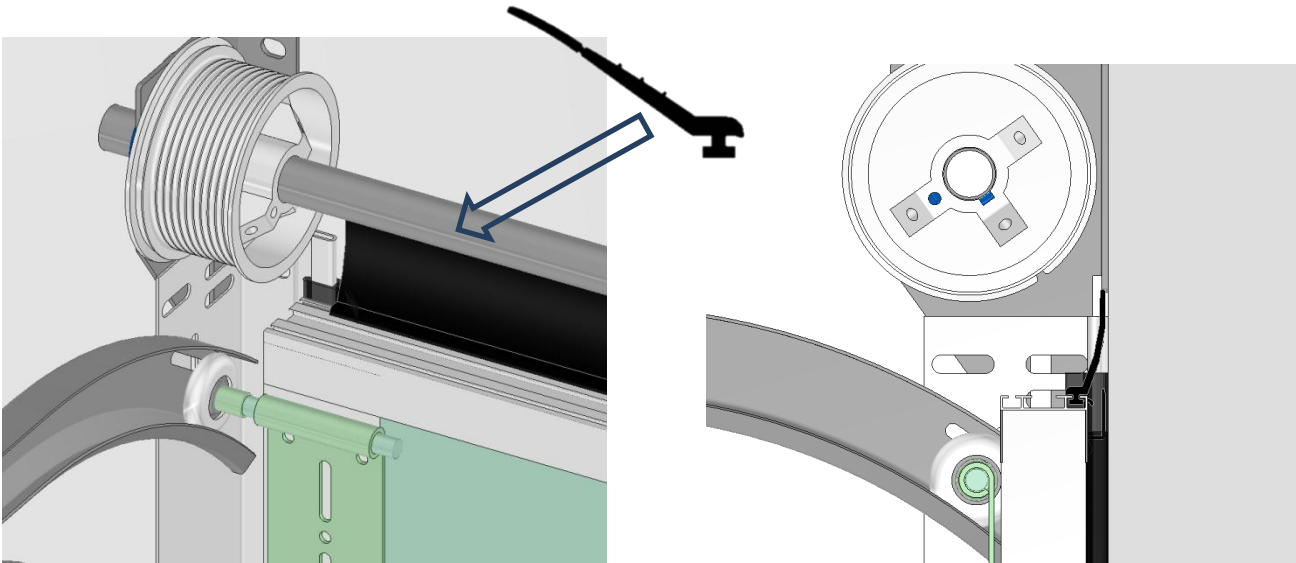


**MONTAGE OF STEEL CABLE**


PUT THE CABLE THROUGH THE CABLEDRUM AND TIGHTEN IT

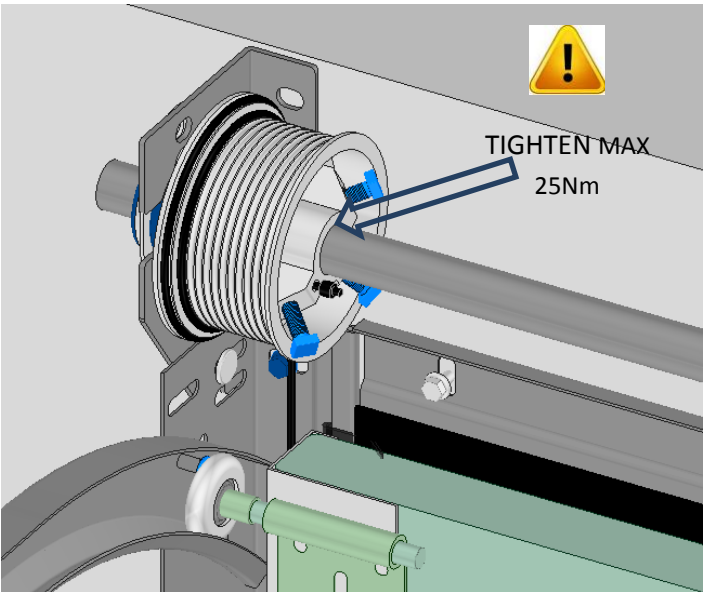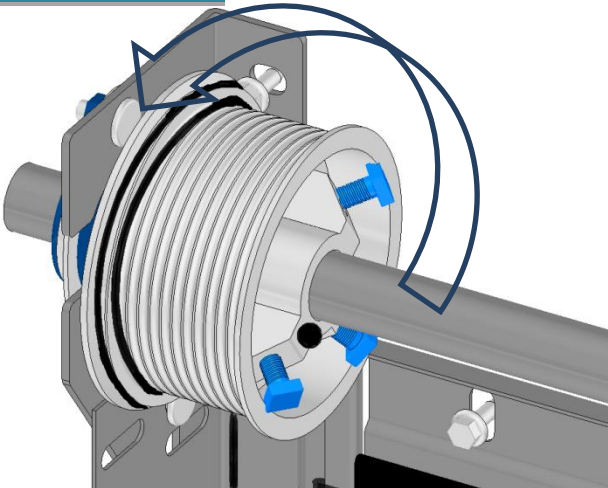

SPRING WINDING UP – INTERNAL SIDE VIEW

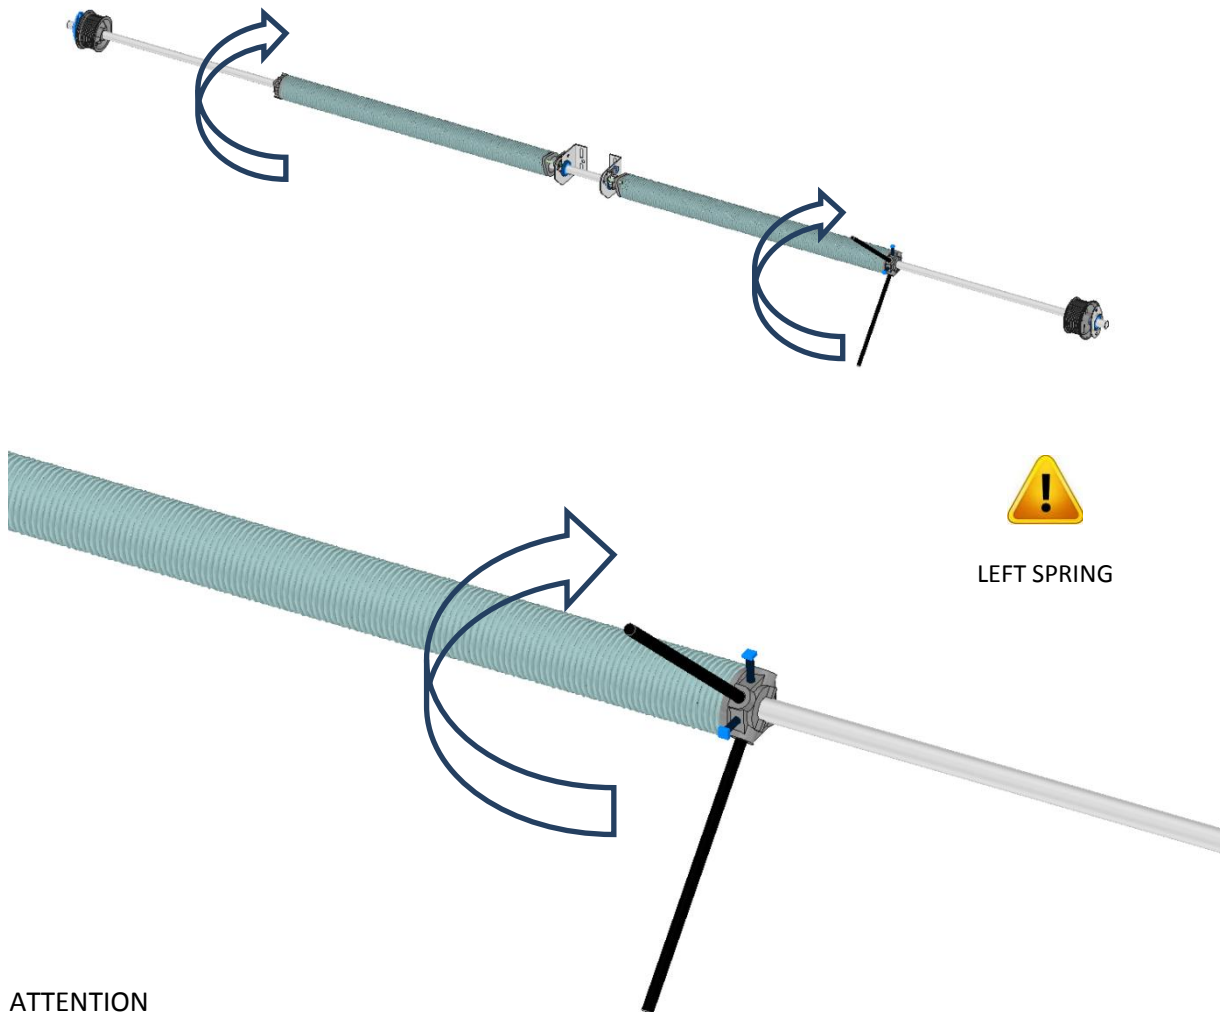


ATTENTION  
DURING TURNING OF TORSIONS SPRING IT IS NECESSARY TO USE HIGH STRENGTH. BE CAREFUL.  
MONTAGE, SERVICE, MAINTANANCE AND REPAIRS CAN ONLY BE PERFORMED BY QUALIFIED STAFF.

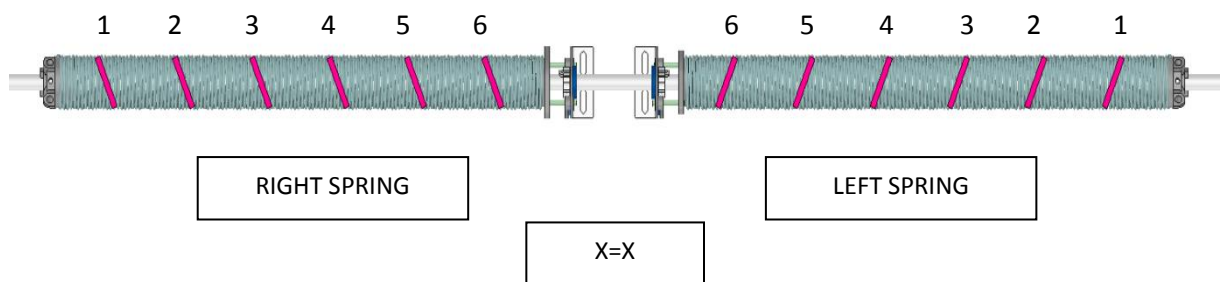


Number of spring turns:  
See sticker on door panels


  
SPRINGS TO BE TURNED AS PER THE TABLE WITH  
SPRING TURNS

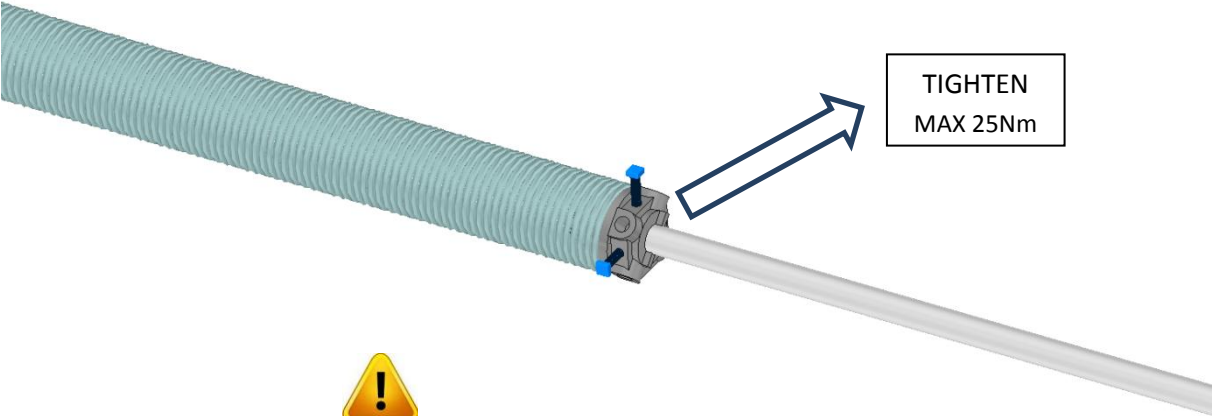


FOR GARAGE DOORS OF HEIGHT  $\geq 3000\text{mm}$  USE A SHAFT WITH KEYWAY AND A SHAFT COUPLER

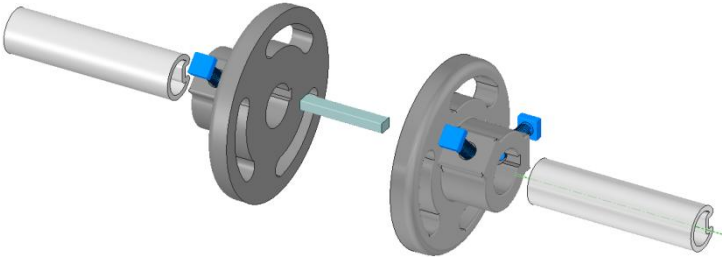

**ATTENTION**

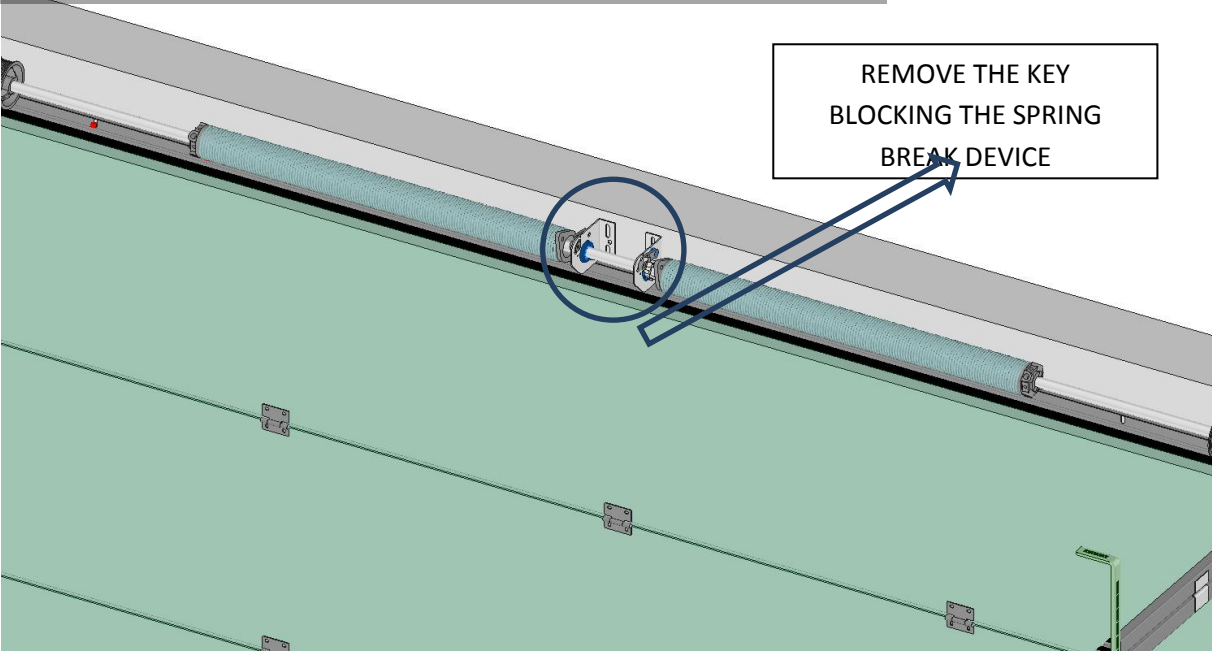

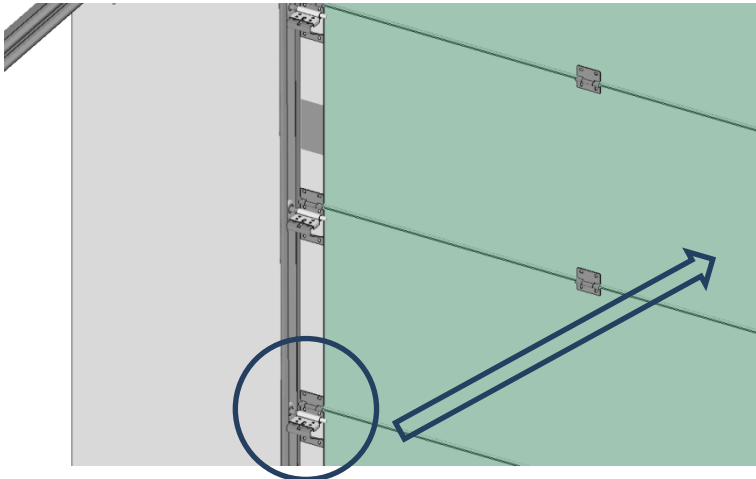

The name or the identification sign and registered address of the producer

The last two digits of the year, when the marking was placed

**EN 13241-1**  
The number of European norm

Description of the product and intended use  
Identification number

**Water resistance** [technical class]

**Wind load resistance** [technical class]


**Thermal resistance** [value]

**Air permeability** [technical class]  
Information about the required quality of the product

**CE**



Conformity CE marking by using CE mark  
Determined in the directive 93/68/EEC

**89/106/EEC; 98/37/EC; 89/336/EEC**  
Issuing appropriate directives

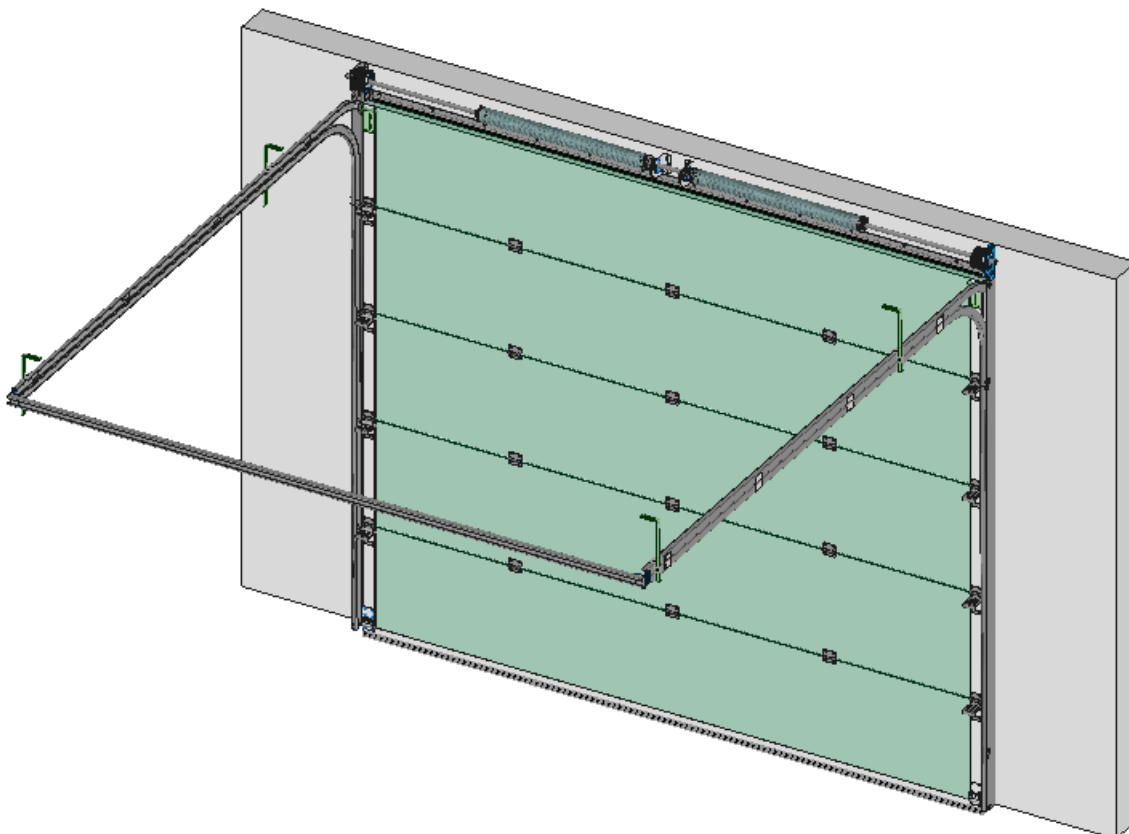



SELECTION OF PANEL SECTIONS HEIGHT AND WIDTH

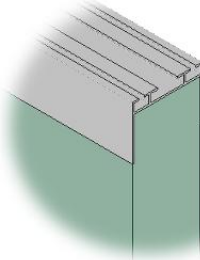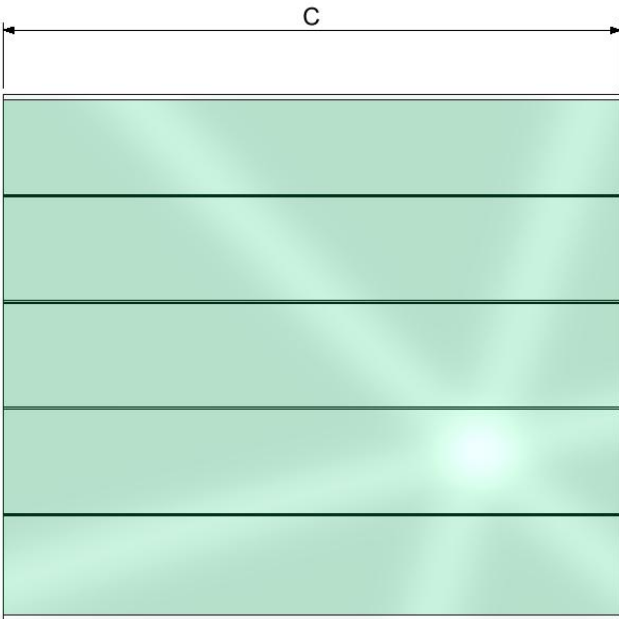

$C=S+45$  WIDTH OF THE PANEL  
 $D=H+15$  HEIGHT OF THE PANEL

